


## OSD Configuration Menu

The OSD Menu displays further OSD configuration menus when selecting F1 from the main OSD menu.

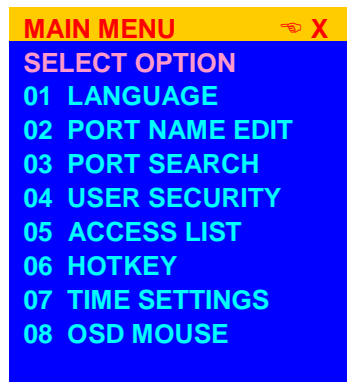

Select **01 LANGUAGE** – for Supervisor only – to set the OSD language to either: English, Francais, German, Italiano, Espagnol, Japanese, Chinese or Russian.

Select **02 PORT NAME EDIT** – for Supervisor only – to change / assign names up to 10 characters long to the computers attached to the appropriate ports.

Select **03 PORT SEARCH** – all users – to search for any computer name as assigned. If you type in only a few characters all computers and ports will be displayed containing these characters.

Select **04 USER SECURITY** – for Supervisor only – to assign the Supervisor password and users and their passwords. For both up to 8 characters can be used.

Select **05 ACCESS LIST** – for Supervisor only – to assign access restrictions to users for certain ports. Default setting is no access restriction. To disable a user from access to a certain port go to the appropriate user and port and select the option by ENTER key. The sign in the matrix list will change from 0 to X to indicate the access restriction.

Select **06 HOTKEY** – for Supervisor only – to change the hotkey to any of the following: Scroll Lock / Caps Lock / Left Ctrl / Right Ctrl / Left Alt / Right Alt / Left Win / Right Win. This hotkey will permanently be changed.

Select **07 TIME SETTINGS** – Supervisor only – set the Autoscan time from 5 up to 99 seconds.

Select **08 OSD MOUSE** – for Supervisor only – to set the speed of the mouse movement in OSD menu. There are 3 choices: slow, medium and fast. Use the appropriate setting for your mouse.

**Note:** You can close the OSD window by simply pressing the ESCAPE key. User and supervisor can only log out via the OSD menu when pressing F2 key.

**This Quick Guide provides a brief introduction to the LINDY U8/16 Modular KVM switch series and shows you how to quickly set up the device for use. For detailed operating instructions please refer to the user manual supplied on the enclosed CD**

### FCC Statement

Shielded cables must be used with this equipment to maintain compliance with radio frequency energy emission regulations and ensure a suitably high level of immunity to electromagnetic disturbances.

### FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

## LINDY KVM Switch U8/U16

## Quick Start Guide

**This Quick Guide provides a brief introduction to the LINDY U8/16 Modular KVM switch series and shows you how to quickly set up the device for use. For detailed operating instructions please refer to the user manual supplied on the enclosed CD**

### The LINDY Modular KVM Switch Series U8/U16

The U8/16 KVM switch series provides either 8 or 16 KVM server ports supporting both PS/2 and USB keyboard and mouse connections. This KVM switch series incorporates a modular concept design which allows for dual console access. The local console port allows direct access whilst a second console option permits remote access either via remote IP or via a remote Cat.5 extender Unit. This allows system administrators to access and administer their servers and KVM switches from a remote office workstation. Optional KVM over IP or Cat.5 access modules may be purchased separately and are simply installed into the back of a U8/16-Modular KVM Switch.

The U8/16 series KVM switches are compatible with almost any KVM switches using standard VGA, keyboard and mouse signals. Please note however that compatibility is only provided via the server ports of the U8/16 series KVM switch and not via the daisy chain ports! The U8/16 is also compatible with older LINDY P-Series KVM switches. Should you wish to mix U- and P-series KVMs or other brand KVMs then it has to be done via port cascading because daisy chain configuration of mixed U- and P-series KVMs is not supported. In this case the other KVM switch hotkeys have to be different from the U8/U16 hotkey (default hotkey = Caps Lock)

### Package Contents

- KVM Switch U8/U16
- Power adapter
- 19" Rack mount kit
- Daisy Chain Cable
- Software & user manual CD
- This quick start guide

### Cable Requirements

Connect your local monitor, USB mouse and USB keyboard using standard USB and VGA cables.

To cascade several KVM Switches via the daisy chain port ONLY use the supplied daisy chain cable or use a system cable as mentioned below for cascading via the computer / server ports.

To connect each individual computer to the switch, you will need to purchase special LINDY KVM system cables as listed below. To connect a USB computer you can either use the PS/2 system cable plus additional PS/2 female to USB male adapters or special KVM USB system cables.

- U8/16, P16, P8/16XT, P16-IP KVM System cable
  - with PS/2 connectors: 1m: 32510, 2m: 32506, 3m: 32507, 5m: 32508
  - With USB connector: 1m: 33530, 2m: 33531, 3m: 33532, 5m: 33533
- PS/2 to USB adapter LINDY No. 70510, short adapter cable No. 70511

### Optional Cat.5 or KVM over IP Module Installation

If you wish to install the optional Cat.5 or KVM over IP module into the U8/16 Modular KVM switch ensure all connected computers are switched off and the power supply is unplugged.

### Power on Password

When you power on the U8/16 it will prompt you for a user name and a password. The **default user name and default password are both eight zeros –“00000000”**.

The security feature for the KVM Switch U8/U16 allows one Supervisor plus 8 users with individual access rights. The configuration is made via the OSD menu – see below.



FOR COMMERCIAL USE ONLY! Tested to comply with FCC Standards



## Computer / Port Switching

You can select the computer you want to access in three different ways:

- Front panel push button selection
- Keyboard hotkey selection (the default hotkey for this KVM switch is CAPS LOCK instead of SCROLL LOCK compared to previous LINDY U-series KVM switches!)
- On screen display menu selection (OSD)

## Front Panel Push Buttons

You may select a computer by pressing the appropriate port push button(s). Ports 1 – 9 may be selected directly by pressing the single port button only. In this case the switch will switch 2 seconds after you have released the button. If you want to switch faster or to ports 10 – 16 you have to press two buttons, i.e. 0 4 or 1 5 after each other. The switch will immediately switch after you have released the last button.




When cascading more than one KVM Switch port selection is made by selecting the bank first and then the port number on the master U8/16 KVM switch. To switch the bank press the button "B" several times until the selected bank number is displayed in the Bank display. Then select the port as described above. You may also switch via the OSD or keyboard hotkey (factory default is Caps Lock).

## Basic Keyboard Hotkey and OSD Commands


Press the following key combinations to enter the OSD menu:

(Factory Default Hotkey is Caps Lock, can be changed via OSD configuration)

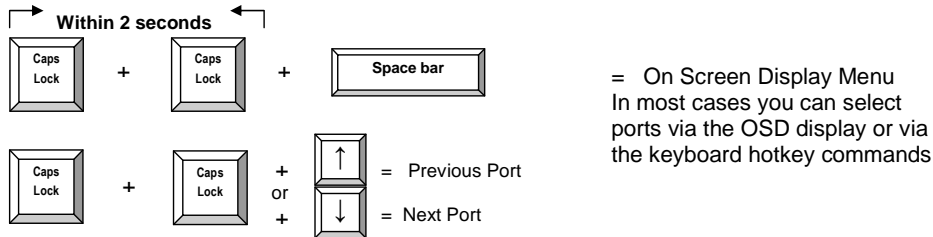


### KVM Switch/Bank Selection (cascaded systems)

 The U8/16 supports daisy chaining of up to 8 KVM Switches (Banks). When using direct hotkey port selection you must include the key sequence for the KVM Switch/Bank:



 **Example:** To access a computer attached to Port 6 of the first KVM Switch you should press the following hotkeys:



**Important!**

Numbers entered from the numeric keypad are not supported!!!

When using keyboard hotkeys, port selections below 10 must always include leading zero's i.e. 304 – for port 4 etc.

## Further available direct hotkey commands:

Command	Action
Space bar	Enter into OSD Main Menu
101 ..... 816	Bank + port number direct selection
P	user / supervisor log out
U	SUPERVISOR only: turn Security function ON / OFF. If security is OFF no password log in is required and Access Control list is disabled!
R	SUPERVISOR only: Set the OSD back to factory default. Except User Security settings.

## On Screen Display Menu (OSD) Port Selection

The On Screen Display menu provides a lot of information about the U8/16 and the attached computers, and offers advanced administration and full KVM Switch control to the user.

102 = Bank 1, Port 02  
System 01 = PC name  
Caps Lock = recent hotkey



### Auto-LOGOUT function

During normal operation, if no input from the keyboard or mouse is received for a period of 10 minutes the KVM switch will turn off the display. Upon the next keyboard or mouse input the Login window will appear prompting for user name and password – this will occur as long as the password security feature has not been disabled.

You may now enter the OSD Main Menu by typing the hotkey twice followed by SPACEBAR.

PORT NAME		
BANK: 1		
01	SYSTEM	01
02	☀ SYSTEM	02
03	☀ SYSTEM	03
04	SYSTEM	04
05	SYSTEM	05
06	☀ SYSTEM	06
07	SYSTEM	07
08	SYSTEM	08

F1 : MENUE
F2 : LOGOUT
ESC : QUIT
ENTER: COMPLETE
⬆/⬇: SELECT PORT
PgDn/PgUp: BANK SELECT

USER :	SUPERVISOR
SCAN TIME	10 SEC.
	FW1V3

Use the cursor keys to select the computers connected on bank 1. Select the computer by pressing the ENTER key. This ☀ symbol indicates all active computers connected. Computers connected not showing this symbol may either be switched off or in a standby mode. To access ports between 9...16 simply scroll down below port 8.